

## **Fire Alarm Panel Operators Guide**

The Fire Panel consists of two sections – the Keyboard/Display (upper module) and the Zone Isolate switches & indicators (lower module).

The Display indicates Alarm, Fault & Isolation Status & instructs the operator on what key to press next.

When an Alarm, Fault or Isolation occurs, the sounder will operate until acknowledged.

**Silence the Bell:** Press the EXT BELL ISOLATE key.

**Isolate Evacuation Panel:** Press the WARN SYS ISOLATE key.


**Acknowledge Alarm:** Press the ACK key.

**Acknowledge a Fault:** press the FAULT ACK key.

**Acknowledge an Isolation:** press the ISOLATE ACK key.

### **To isolate a zone (No isolate switches)**

1. Identify the Zone number from the alarm text
2. Pull the display flap down press <zone (1)> key followed by the zone number and press <enter>.
3. Press red <isolate> key followed by <ack> to confirm isolate.
4. **De-isolate** press yellow <isolate ack> key repeat ably to scroll through isolate list
5. With desired zone displayed press <isolate> and <ack> to confirm de-isolate.

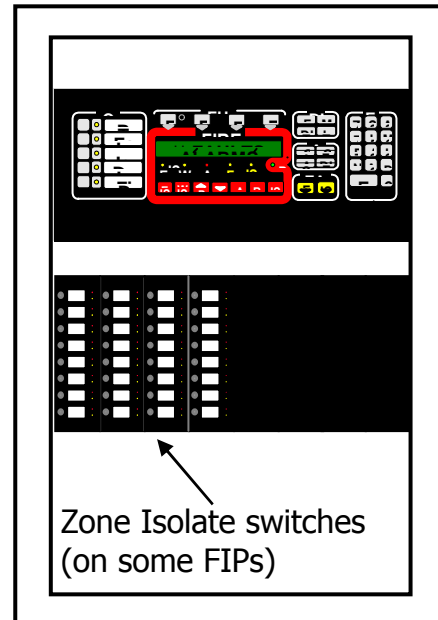

### **To isolate a zone with toggles switches installed**

1. Identify the zone number from the alarm text
2. Toggle the zone isolate switch to isolate or de-isolate zone

When a non-isolated alarm is detected, the fire panel rings the bell, calls the fire brigade, shuts down the air-conditioning, shuts off the gas & activates the Evacuation Panel (if installed).

*The panel is reset by pressing the RESET key & following instructions on the display.*

